


1	Product Features	3
2	Panel Layout	4
3	Function and Operation	5
3.1	Select Operation Voltage	5
3.2	Set the output Voltage	5
3.3	Set the output current	6
3.4	Turn on or turn off output	6
3.5	Set the output on at the AC power on	6
3.6	Lock	7
3.7	Display the output power	7
4	Protection	8
4.1	Over Voltage Protection	8
4.2	Over current protection	8
4.3	Over temperature protection	8
5	Application	9
5.1	Series Connection	9
5.2	Parallel Connection	9
6	Specifications	10

1 Product Features

- Top performance cost ratio
- High power density, smallest and compact
- Aluminum shell, lower EMI
- The microprocessor(MCU) control
- Using Encoder to set the voltage and current
- Four digital volt meter and three digital current meter
- The current meter displays mA automatically when current below 1A
- High efficiency, up to 88%.
- Low Ripple & Noise: ≤ 30 mVp-p.
- Output ON/OFF
- Lock switch/Watt switch
- Intelligent protection: Tracking OVP, Tracking OCP, OTP, Output short circuit protection

2 Panel Layout

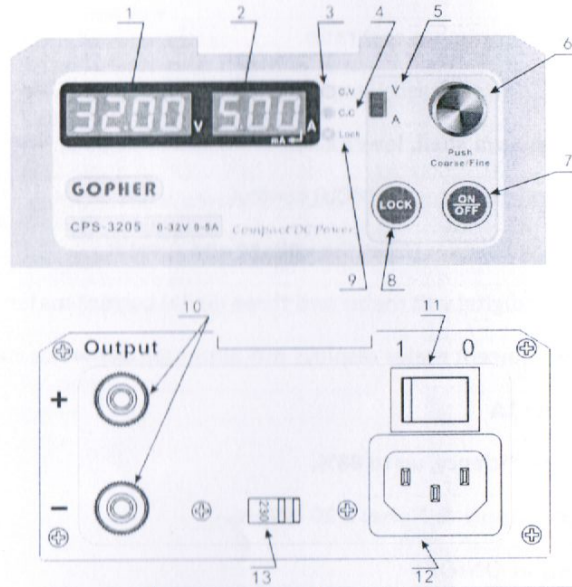

No.	Name	Shown in diagram or State	Function
1	Volt meter		Display the setting voltage or the actual output voltage
2	Current meter		Display the setting current or the actual output current (below 1 A, display mA), output state (OFF, OVP, OCP, OTP)
3	Constant voltage indicator	Turn ON/OFF	Turn ON—Constant voltage state
4	Constant current indicator	Turn ON/OFF	Turn ON—Constant current state
5	Voltage/Current select switch		Switch to V to adjust voltage
			Switch to A to adjust current
6	Adjusting Knob		Rotation—increase or decrease
			Push—Coarse/Fine

7	ON/OFF		Click—output on or output off
			Push it for 5 seconds to set the output on at turn on the power supply anytime.
8	LOCK		Click, lock/unlock. In the lock state (Lock light is on), adjusting knob and ON/OFF button can't change output state.
	Or WATT		Click, digital tube of ammeter highlights the current output power and light is on. Restore the current display automatically after display lasts 5 seconds.
9	Lock or Watt light	Turn ON/OFF	Indicate the function state.
10	Output Terminal		Red—Output '+'/ Black—Output '-'
11	Power Switch		Power ON/OFF
12	AC Socket		AC Input Socket
13	230VAC/115VAC Select Switch		Number "115": Rated input Voltage 115VAC
			Number "230": Rated input Voltage 230VAC

3 Function and Operation

3.1 Select Operation Voltage

Warning: If the voltage select switch set to 115, the rated AC input Voltage must be 100V-120V, otherwise the power supply will be damaged at the input voltage 230VAC.

Carefully to set the switch according to the AC input Voltage, the default factory

set is 220Vac input like right picture

3.2 Set the output Voltage

Switch the adjusting selective switch to "V", click the adjusting knob, the volt meter display the set voltage and the adjustable position highlight as fig1, the highlight will shift from right to left when user clicks the knob continually. Then

adjust the knob to set the highlight number.

For example: Set the output voltage is 24.15V. At first, click the knob, the rightmost position of the volt meter highlight, adjust the knob to set the highlight number to 5, then click the knob again the highlight will shift to left, adjust the knob to set the highlight number to 1, then set the highlight number to 4 and 2 in the same way, finally the output voltage is set to 24.15V.

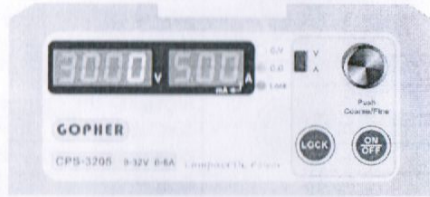




fig1

3.3 Set the output current

Switch the adjusting selective switch  to "A", click the knob the Ammeter display the set current, the operation is same as setting voltage.

3.4 Turn on or turn off output

when the output is turned off, the ammeter highlights "OFF" (as shown in fig2).

press "ON/OFF"  the output turned on. Then Press the button again the output turned off.

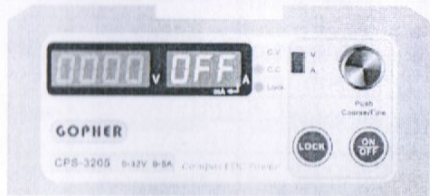



fig2

3.5 Set the output on at the AC power on

Press "ON/OFF"  button for 5 seconds, ammeter highlights "dOn" for 2

seconds (fig3-a), the output is set to on at the AC power on. To cancel this function, press "ON/OFF" button again for 5 seconds, ammeter highlights "dOF" for 2 seconds (fig3-b). The output is off at the AC power on.



fig3-a

fig3-b

3.6 Lock

This function is configured on the model without suffix "L". Click "Lock" button



, the lock light turns on, ON/OFF button and adjusting knob are locked (fig 4).

To cancel the function please click the "Lock" button again and the lock light turns off.

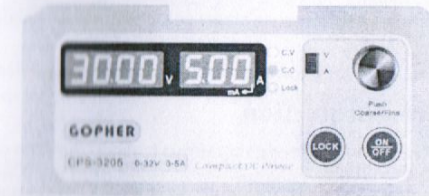


fig4

3.7 Display the output power

This function is configured on the model with suffix "L". Click "WATT" button



, power indicator light turns on and ammeter highlights the output power for 5

seconds (fig 5).

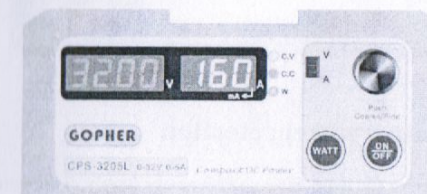


fig5

4 Protection

4.1 Over Voltage Protection

MCU controls the tracking OVP, OVP value is relevant to the setting voltage, this function protect the appliance which connected to the power supply safely. When OVP is triggered, MCU shut down the output and the ammeter highlights "OVP" as fig6. Press ON/OFF button to reset the OVP if the over voltage problem has been resolved.

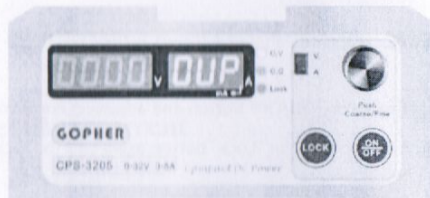


fig6

4.2 Overcurrent protection

MCU control the tracking OCP, OCP value is relevant to the setting current. This power supply can operate constant current mode, so if the C.C works normally the OCP never be triggered. However if the C.C works abnormally the tracking OCP will protect the appliance which connected to the power supply safely. When OCP is triggered, MCU shut down the output and ammeter highlights "OCP" as fig 7, press ON/OFF button to reset the OCP if the over current problem has been detected.



fig7

4.3 Overtemperature protection

The MCU monitor the temperature of the power supply, if the temperature is higher than the special value MCU shut down the output and ammeter highlights "OTP" as fig8, press ON/OFF button to reset the OTP if the temperature lowered.

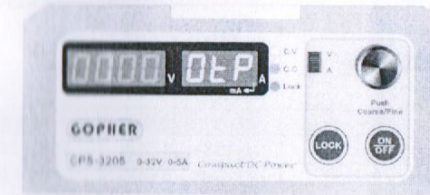


fig8

5 Application

5.1 Series Connection

Several units can be connected in series in order to gain a higher total output voltage. To do so, the positive DC output of one unit is connected to the negative DC output of the next unit etc. The non-connected positive and negative of the last unit will be the positive and negative of the whole series output, and will have the high voltage output.

- In view of safety and insulation, it is not allowed to connect an arbitrary number of units in series. The DC output of series system must not be raised higher than 500 V DC.
- If units with different nominal current are connected in series, the minimum nominal current of the products is the maximum current of the system.
- In a series connection, only negative DC output of one unit (the one with negative DC output in the series system) may be grounded.

5.2 Parallel Connection

Several units which are preferably same type, but at least identical nominal output voltage, can be connected in parallel in order to gain a higher total output voltage. It is recommended to adjust the output current to the maximum and the output voltage to identical value on every unit.

6 Specifications

Model	CPS-3203(L)	CPS-3205(L)
Operation Voltage Range	198 – 264Vac	198 – 264Vac
Operation Frequency Range	45 – 65HZ	45 – 65HZ
Output Voltage Range	0 – 32V	0 – 32V
Output Current Range	0 – 3A	0 – 5A
Efficiency (220Vac/full load)	≥85%	≥ 87%
Full Load Input Current(220Vac)	≤0.9A	≤1.4A
No Load Input Current(220Vac)	≤ 80mA	≤ 80mA
Volt Meter Accuracy	≤ 0.3% + 1digits	≤ 0.3% + 1 digits
Current Meter Accuracy	≤ 0.3% + 2 digit	≤ 0.3% + 2 digit
Constant Voltage		
Load Regulation (0-100%)	≤ 30mV	≤ 30mV
Line Regulation(198-264Vac)	≤ 10mV	≤ 10mV
Ripple & Noise (Peak-Peak)	≤ 30mV	≤ 30mV
Ripple & Noise (r.m.s)	≤ 3mV	≤ 3mV
Set Accuracy	≤ 0.3% + 10mV	≤ 0.3% + 10mV
Transient Response Time (50%-100% rated Load)	≤ 1.0ms	≤ 1.0ms
Constant Current		
Load Regulation(90%-10% Rated Voltage)	≤ 50mA	≤ 50mA
Line Regulation (198-264Vac)	≤ 20mA	≤ 20mA
Ripple & Noise (Peak-Peak)	≤ 30mAp-p	≤ 30mAp-p
Set Accuracy	≤ 0.3% + 20mA	≤ 0.3% + 20mA
Size(width × height × depth)	120×55×143mm	120×55×168mm
Net Weight	0.75KG	0.85KG

Gopher Technology co, LIMITED

Tel.: 020-22094341

Fax: 020-22863435

Web: <http://www.gophertc.com>

Safety Regulations

To avoid electrical shock, non-authorized person of our company is not allowed to open the cabinet.

It is forbidden to use this product for life support system or any other devices with high safety requirements.

We are not responsible for any direct or indirect financial damage that might occur when using the power supply.

Warranty

This hardware product is warranted against defects in material and workmanship for a period of two years from date of delivery.

For warranty service, this product must be returned to a service facility designated by our company. Customer shall prepay one-way freight for products returned to our place for warranty service. Our company shall pay for return of products to customer. Customer shall pay all freight, duty and taxes if the product is back from foreign countries for repair.

Limitation of Warranty

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by the customer, customer-supplied software or interfacing, unauthorized

modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation and maintenance, installing circuit by the customer or using their own product, changing, deleting, removing or unrecognizing the product model or serial number, accident including but not limited to lightning stroke, water, fire, misuse or neglect.

WARNING

Do not use this power supply near water.

Do not operate or touch this power supply with wet hands.

Do not open the casing of the power supply when it is connected to ac mains.

CAUTION

Use a grounded 3 pin AC source.

This unit is for indoor use only.

Do not operate or place this unit in a humid, dusty, in direct sunlight location or near any heat source.

Before plugging into local AC mains, carefully to set the switch according to the AC input Voltage.

Do not block any ventilation openings of the unit.

This unit must be used within the specified rating; regular excessive continuous loading may cause damage to the power supply.